



CD-16, CD-8 In Wall Microphone Console

User Manual

User manual, CD-16-8-10UMS01-V01R03

DELIVERING Your MESSAGE

version	revision	date
01	02	14-09-2011

www.ateis-europe.com

ATEIS Europe BV - Sydneystraat 42 - 3047BP ROTTERDAM - NETHERLANDS
Phone +31 (0)10 2088690 - Fax +31 (0)10 2088699
P.O. box 12172, 3004 GD, ROTTERDAM - Chamber of commerce: 24465391 Rotterdam

1. Table of Content

1. Table of Content	2
1. Welcome:	3
1.1. Ateis Presentation	3
1.2. EC Declaration of Conformity	5
2. CD-16,CD-8 System Presentation	7
3. Hardware Presentation	8
3.1. Front view	9
3.2. Rear view	10
3.3. External device: Junction Box	10
4. LED Indicators	12
4.1. General system indicators	12
4.2. Configurable key status LED	12
4.3. TALK and ALL CALL/RELEASE LEDs	12
5. Working with the VACIE System	12
5.1. Busy zone indication	12
5.2. Starting a microphone call	13
5.3. All Call/Release button	14
Monitoring speaker	15
6. CD-16,CD-8 connections	15
6.1. RS485 through CAT5	15
6.2. CD-16,CD-8 on DIVA8	16
6.3. CD-16,CD-8 on IDA8	17
6.4. CD-16,CD-8 on IDA4	18
7. CD-16,CD-8 troubleshooting guide	19
7.1. CD-16,CD-8 can't boot	19
7.2. Noise in the speaker	19
7.3. CD-16,CD-8 is powered ON but the buttons don't work.	19
7.4. CD-16,CD-8 is connected to VACIE but there is a connection fault state	19
8. Safety Declaration	20
9. International sales and service points	22

1. Welcome:



Thank you for choosing ATEİS PSSG2. We (at ATEİS) hope you will enjoy using this exciting piece of technology as much as we enjoy developing and building it.

This Help file Manual version is: Ver: CD-16-8-10UMS01-V01R02

This manual is intended to provide users the necessary understanding to safely uses PSSG2 system as well as guide users through all configuration procedures.

This manual can be updated at any time without prior notice in order to keep this manual up to date.

In case of errors in this manual or not clear process description, feel free to submit us mistakes, suggestions or questions by sending an [email](#).

This document intends to be a complete manual and ATEİS hopes that this Help file manual will provide you all information or answers needed. However if you have any questions, feel free to contact us.

1.1. Ateis Presentation

With more than twenty years of experience, ATEİS has quickly established itself as a leading manufacturer of Public Address, Voice Alarm systems and counter intercoms. The constant growth of market share in Europe provides confirmation of the quality of ATEİS's commercial and technical approach.

Products:

The company now offers a full range of sound equipment: microphones, preamplifiers, digital processors, digital audio matrixes, loud-speaker monitoring systems, amplifiers, etc. ATEİS designs and manufactures leading products in the voice alarm systems market which have been certified EN60849 compliant by the TÜV.

Development:

Thanks to a development team that includes thirty engineers, and to constant investment, we are able to respond rapidly to the demands of our various markets with specific solutions and cutting edge technology. We have distributors in more than fifteen countries in Europe and the Middle East, with whom we have carried out major projects. In choosing ATEİS, you are guaranteed a trustworthy partner that can be counted on for the long term.

ATEİS Field:

ATEİS's audio systems have been installed in the following markets:

- Railways
- Subways
- Airports

- High raise buildings
- Hotels
- Restaurants
- Shopping malls
- Theme parks
- Places of worship
- Stadia.
- Museums.
- Industrial buildings
- Industrial plants
- Commercial buildings

2. EC Declaration of Conformity



0359-CPD-0140

EC Declaration of Conformity

Penton Communication Incorporated, No. 28-2, Ta-Ya Road, Ta-Ya, Taichung, Taiwan as manufacturer having sole responsibility, hereby declares that the following product versions comply with the applicable provisions of the DIRECTIVES. In case of alterations to the product, not agreed upon and not directed by Penton Communication Incorporated, this declaration is no longer valid.

Product:

DIVA8 SYSTEM VACIE comprising Models;

DIVA8MG2, Master Controller

DIVA8SG2, Slave Controller

PSS-G2, Console device

CD8-G2, Console device

CD16-G2, Console device

DPAfour125, Power amplifier

DPAfour250, Power amplifier

SPA-2120, Power amplifier

SPA-2240, Power amplifier

Powersonic, PS-12750 12V75AH battery,

Mounted in the bottom of the enclosure

DK7820.XXX Rittal System cabinet*

XXX – denotes cabinet size

The system cabinet must meet the following minimum requirements where an alternative cabinet is used:

- Comply with Class 3k5 of EN 60721-3-3:1995 as amended by EN 60721-3-3:1995/A2:1997.
- Complies with EN 60297-3-100 and be constructed with a minimum of 16-gauge steel, with a fully welded rack frame with fixed front to back equipment chassis carriers.
- Have a transparent lockable front door with a maximum frame size around the transparent window such that its indications are viewable at the limits specified in EN54-16: 2008.
- Have a minimum IP rating of IP 30 in accordance with EN 60529: 2000, with the front hinged door in both the open and closed position
- Removable / hinged panel(s), that are provided to gain access to part of the equipment, other than that detailed above, must use of alternative key or different lockable mechanism to that used for the front door.

Conditions of use:

Suitable for indoor applications

To be used in conjunction with a compliant EN54-4 power supply unit

Applicable Directive:

In compliance with the Directive 89/106/EEC of the council of European Communities of 21 December 1988 on the approximation of laws, regulations and administrative provisions of the Member States relating to the construction products (Construction Products Directive – CPD), amended by the Directive 93/68/EEC of the Council of European Communities of 22 July 1993.

Evaluation standard:

EN54-16:2008

Fire detection and fire alarm systems – Part 16: Voice Alarm Control and Indicating Equipment

Provided Options:

- Audible warning
- Phased evacuation
- Manual reset of the voice alarm condition
- Voice alarm condition output
- Indication of faults related to the transmission path of the CIE
- Indication of faults related to the voice alarm zones
- Interface to external control device(s)
- Emergency microphones
- Redundant amplifiers

Ancillary Functions:

Background music/audio and zone paging (2-simultaneous channels)

Notified body (Test and Certification):

Intertek Testing & Certification Limited
Intertek House, Cleeve Road, Leatherhead,
Surrey,
KT22 7SB, UNITED KINGDOM

Issued:


March 2012

First placed on the market by:


ATEIS Europe BV
Sydneystraat 42
3047BP ROTTERDAM
NETHERLANDS
Telephone: +31 10 2088690
Fax: +31 10 2088699
Email: info@ateis-europe.com

Authorized Representative:

J.H.E. Haak (Managing Director)
Authorized signature:

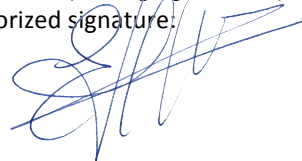

3. CD-16,CD-8 System Presentation

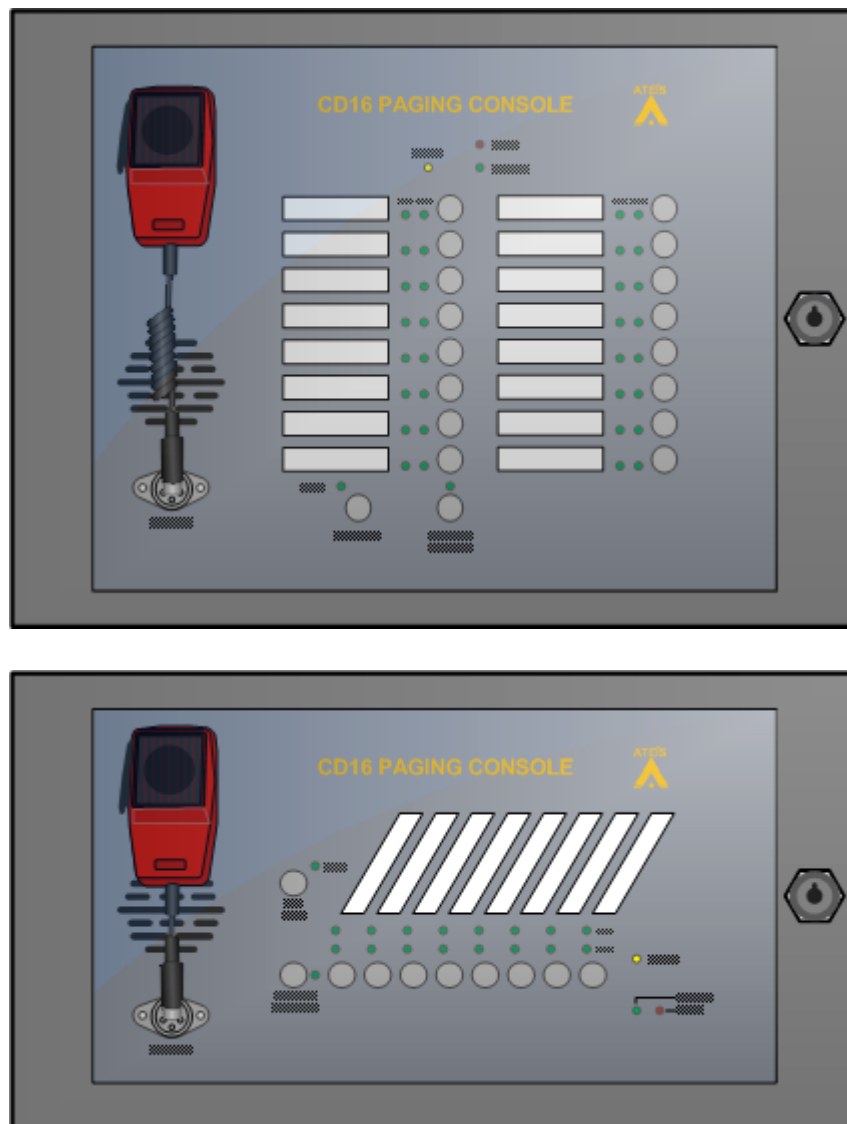

Wall-mount heavy duty remote paging console with Access level 2 protection to comply with the EN 54-16. Compatible with DIVA8 System, IDA4 System and IDA8 System and communicates over a dedicated RS485 for Power, audio and DATA.

The unit comprises of 16 zones / 16 buttons with first firemen's microphone in a metal surface mount wall-box. It provides robust IP-30 protection. Each CD-16,CD-8 contains a PSM-Master PCB with extension keypad and uses the same architecture as for the PSM-series of microphone consoles. Each DIVA8 System, IDA4 System and IDA8 System can handle up to 32 CD-16,CD-8 . CD-8 is limited to eight programmable keys.

The buttons can represent a single zone or a group of zones. All buttons can be programmed with drag & drop features from the DIVA8 System, IDA4 System and IDA8 System GUI and the PTT button can be programmed for Push To Talk or for latching functionality.

The unit offers "Hold" and "Busy" LED signals in addition to the zone LED's, and these allow the easy identification of selection / Busy signals for the user. In addition, to comply with EN 54-16, separate POWER, FAULT and EVAC indicators are provided.

The RS485 communication protocol offers daisy chaining of up to 300 m on a simple CAT5 cable, and yet makes outlets easy to connect via a standard RJ45 connector.


4. Hardware Presentation

General Information:

- 16 buttons / Music button 1&2 plus separate PTT button. 8 buttons for CD-8.
- Fireman fist microphone with PTT (CB-type).
- Distortion less than 0.6%.
- Inputs S/N ratio: >75 dBu.
- Frequency response: 100 Hz - 16 kHz (For the electronics).
- Feedback speaker.
- 2 stereo RCA entries with selection buttons.
- 3 LED indicators: Power/General Fault/Evacuation active.
- Voltage: 24 VDC (Provided by DIVA8 System,IDA4 System and IDA8 System).
- Dimensions: 334x247x134 mm.
- Colour: RAL 7016.


Front View :

4.1. Front view

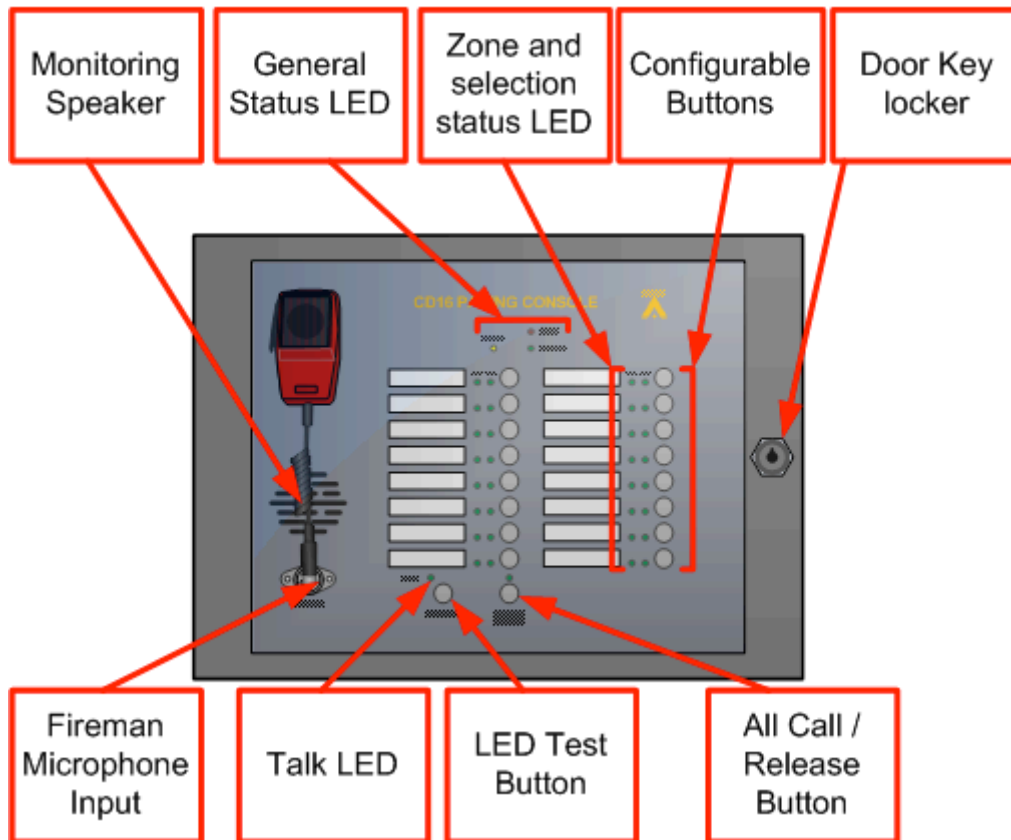

- **Monitoring Speaker:** VACIE audio streams monitoring loudspeaker.
- **General Status LED:**
 - **POWER LED:** Indicates the power status of the CD-16,CD-8
 - **FAULT LED:** Indicates the presence of a fault on the system the CD-16,CD-8 is linked to.
 - **EVAC LED:** Indicates the presence of a evacuation state on the system the CD-16,CD-8 is linked to.
- **Zone and Selection LED:**
 - **BUSY LED:** Indicates the zone busy state.
 - **HOLD LED:** Indicates zone selection key active state.
- **Configurable button:** Depending on which VACIE system the CD-16,CD-8 is connected to, the programmable key could offer a big variety of function. Reading the VACIE user manuals will let you know all the possibilities offered (IDA4, IDA8 and DIVA8).
- **Door Key Locker:** The CD-16,CD-8 door has been designed to offer EN54 level access. This is why a door locker has been provided.
- **Fireman Microphone Input:** Allows the connection of the SHM1 microphone.
- **Talk LED:** indicates when a call is active. Blinks during chime.
- **All Call/Release Button:** Allows instantaneously the selection or release of all zone keys.

4.2. Rear view

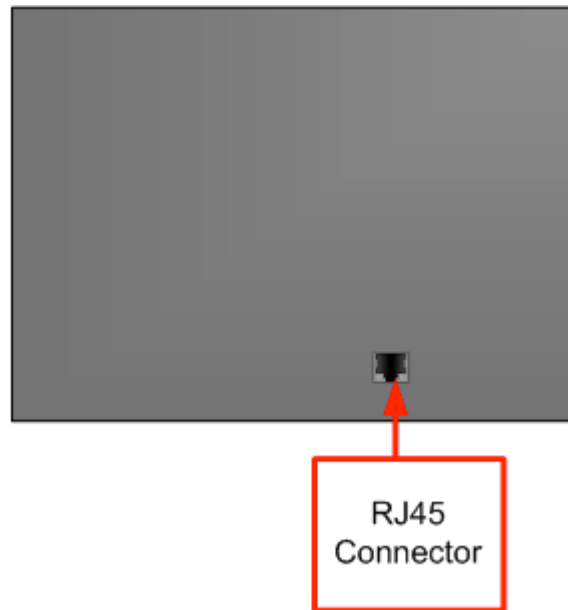

- **RJ45 Connector:** CD-16,CD-8 output to VACIE. This connection is made through shielded CAT5 cable, read the how to connect CD-16,CD-8 to VACIE chapters.

4.3. External device: Junction Box



Easy chain-connection of LAP peripherals (URC and PPM) or VACIE peripherals (PSM, CD-16,CD-8) using standard shielded CAT5 cables.

KEY FEATURES:

- 5 x RJ45:
 - Connection to previous JB (or LAP bus on the first JB, Call stations bus on VACIE system)
 - RS485-SIDE for URC connection
 - Easy connection to a Master PPM using the supplied 10 pins cable.
 - Connection to first Slave PPM/PSM (Slave features are not available on PPM and CD-16,CD-8)
 - MAIN OUT connection to next JB
- 2 internal screw connectors for 0 dB audio:
 - audio output from PPM/PSM/CD-16,CD-8 microphone --> Audio Output (not used with PSM/CD-16,CD-8)
 - audio input to PPM speaker --> Audio Input (Not used with PSM/CD-16,CD-8)

CD-16, CD-8

- 1 input for additional 24V power supply. (Depending on distance between LAP and PPM/URC or PSM/CD-16,CD-8 to the VACIE, you will have to put an external power supply)
- 1 internal switch for PPM/PSM/CD-16,CD-8 Master or Slave selection. (Slave features are not available PPM and CD-16,CD-8)
- 1 internal switch for System or Local power supply selection.

5. LED Indicators

The CD-16,CD-8 microphone console offers general VACIE indicators LED as well as configurable button status LED.

5.1. General system indicators

The CD-16,CD-8 has three different main LED indicators to show different status of the CD-16,CD-8 and VACIE system: Power, Fault and Evac states.

In order to check for the LEDs condition, every 35 seconds both Fault and Evac blinked once.

Power LED: indicates the presence of power on the CD-16,CD-8.

Fault LED: the fault LED is permanently lit if a fault state in the VACIE system has been engaged.

Evac LED: the Evac LED is permanently lit if a evacuation state in the VACIE system has been engaged.

5.2. Configurable key status LED

As briefly introduced before, the key configuration of the CD-16,CD-8 depends on the VACIE system used with it. Please refer to VACIE user manuals to learn more about all the configuration possibilities offered.

However, independently from the VACIE system, when zone selection key are programmed, the two zone status LED act as follow:

BUSY LED: indicates the presence an audio event on the corresponding zone or group of zone.

HOLD LED: The HOLD LED indicates the user that the zone is still in an active selection state. When lit, all next call or music routing will be routed to that zone. **Note:** Before making any call or any music routing, make sure that the HOLD LEDs reflect the desired zones selection.

5.3. TALK and ALL CALL/RELEASE LEDs

The CD-16,CD-8 call is activated by the fist microphone switch. The talk LED will reflect the status of the call.

ALL CALL/RELEASE LED: Will be lit when a all call zone selection is active or when all individual zone keys have been selected. Will be OFF when the button is used for the release of an all call selection.

TALK LED: Will be lit when the user can speak in the microphone and blinking during the broadcasting of a pre or post chime.

6. Working with the VACIE System

As stated previously, the key configurations and possibilities depend on the VACIE system connected to the CD-16,CD-8. However some operations are common to all system.

6.1. Busy zone indication


When a system zone is occupied by an audio broadcasting, the corresponding CD-16,CD-8 zone key is signalized as busy, the corresponding zone busy LED will lit.

6.2. Starting a microphone call

In order to start a call in a zone or group of zone, follow the next steps.

Start a call without chime:

- Open the CD-16,CD-8 door.
- Grab the handheld fireman microphone.

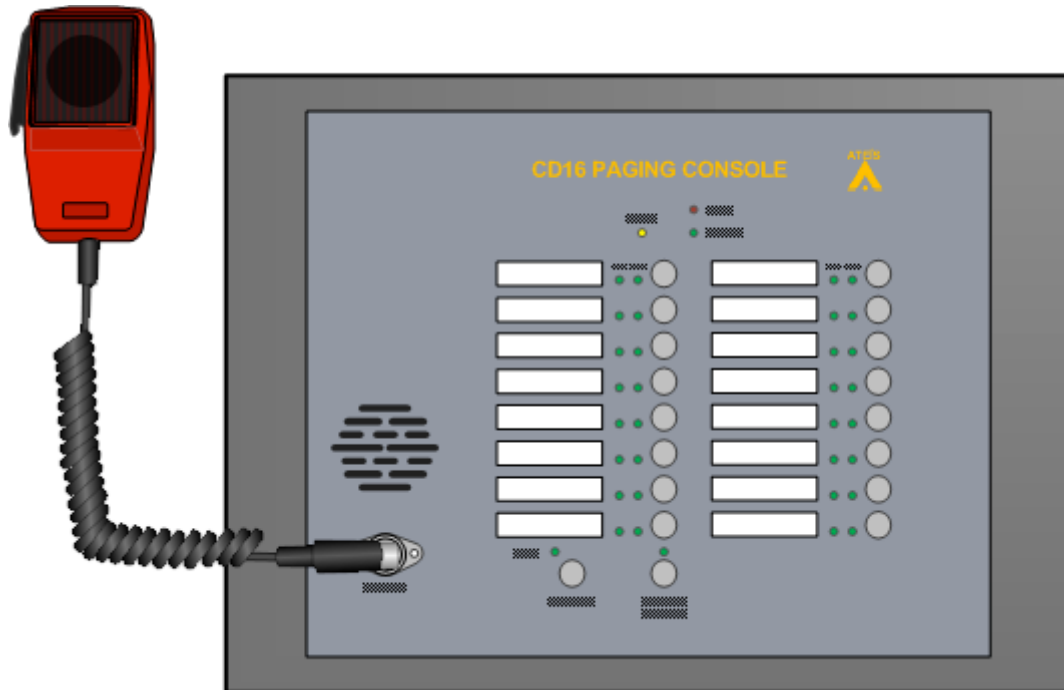


- Select the call broadcasting zone by pressing the zone(s) button(s). The corresponding LED(s) should light up.



- Press the fist microphone switch. When the Talk LED is permanently lit, you can talk in the microphone.
 - **In Press To Talk Mode:** press and keep your finger on the fist microphone switch.
 - **In Lock To Talk Mode:** press once on the Fist microphone switch.
- To stop the call:
 - **In Press To Talk Mode:** release your finger from fist microphone switch.
 - **In Lock To Talk Mode:** press once on the Fist microphone switch.

Start a call with chime:

- Open the CD-16,CD-8 door.
- Grab the handheld fireman microphone.

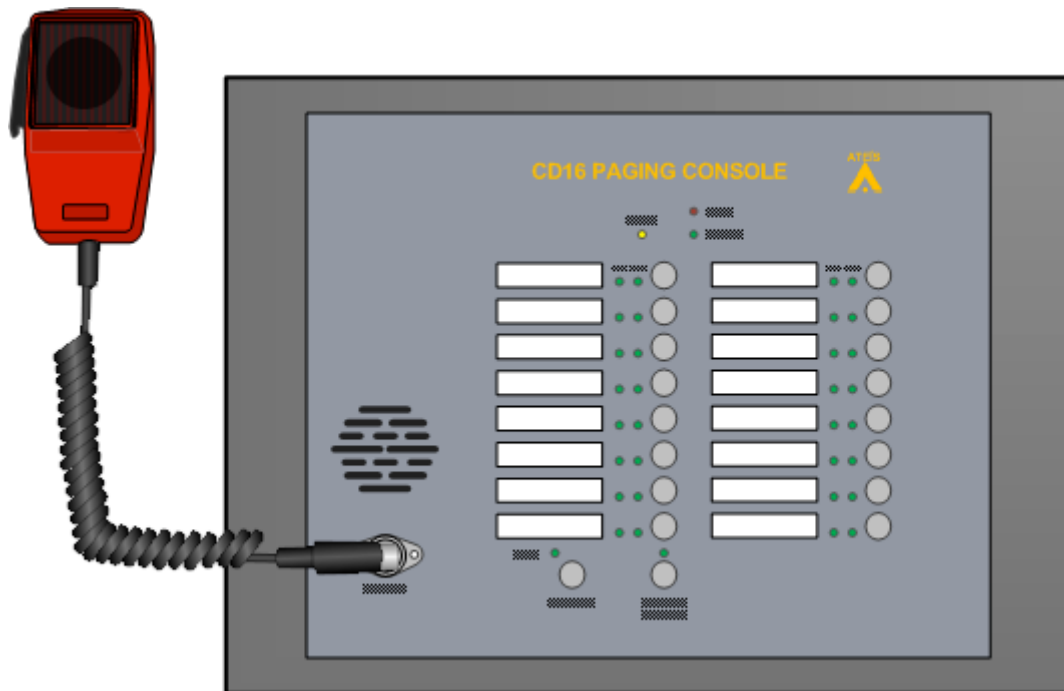

- Select the call broadcasting zone by pressing the zone(s) button(s). The corresponding LED(s) should light up.



- Press the fist microphone switch. During the broadcasting of the pre-chime, the TALK LED will blink. When the Talk LED is permanently lit, you can talk in the microphone.
 - **In Press To Talk Mode:** press and keep your finger on the fist microphone switch.
 - **In Lock To Talk Mode:** press once on the Fist microphone switch.
- To stop the call:
 - **In Press To Talk Mode:** release your finger from fist microphone switch.
 - **In Lock To Talk Mode:** press once on the Fist microphone switch.

6.3. All Call/Release button

You can instantaneously select all the zones by pressing the ALL CALL/RELEASE button.

- Prior to a call, press the ALL CALL/RELEASE button.

If a zone(s) selection is active (HOLD LED are lit), pressing the ALL CALL/RELEASE button will instantaneously deactivate the zone selection.

- To deactivate a zone selection, press the ALL CALL/RELEASE button.

- **Monitoring speaker**

The audio that is routed to the CD-16,CD-8 monitoring speaker depends on the VACIE configuration. Please refer to the VACIE user manual to learn more about how to route audio on the CD-16,CD-8 monitoring speaker.

The monitoring speaker level can be adjusted through the VACIE configuration software.

7. CD-16,CD-8 connections

In this chapter you will learn how to connect a CD-16,CD-8 microphone to a VACIE system as well as how to connect external microphone, external speaker and telephone handset.

7.1. RS485 through CAT5



The CD-16,CD-8 uses RS485 protocol over shielded CAT5 to transport data from the microphone to the VACIE.

The theoretical maximum distance for RS485 is 1000 meters. However, as the CD-16,CD-8 is powered via the VACIE system a maximum of 200 meters is recommended without the use of an external power supply.

The CD-16,CD-8 microphone is supplied with a 10 to 8 pins CAT5 cable converter.


When using an external power supply, make sure that the Junction Box power switch is set to EXT.PWR. and the MASTER-SLAVE switch to the MASTER position.

7.2. CD-16,CD-8 on DIVA8

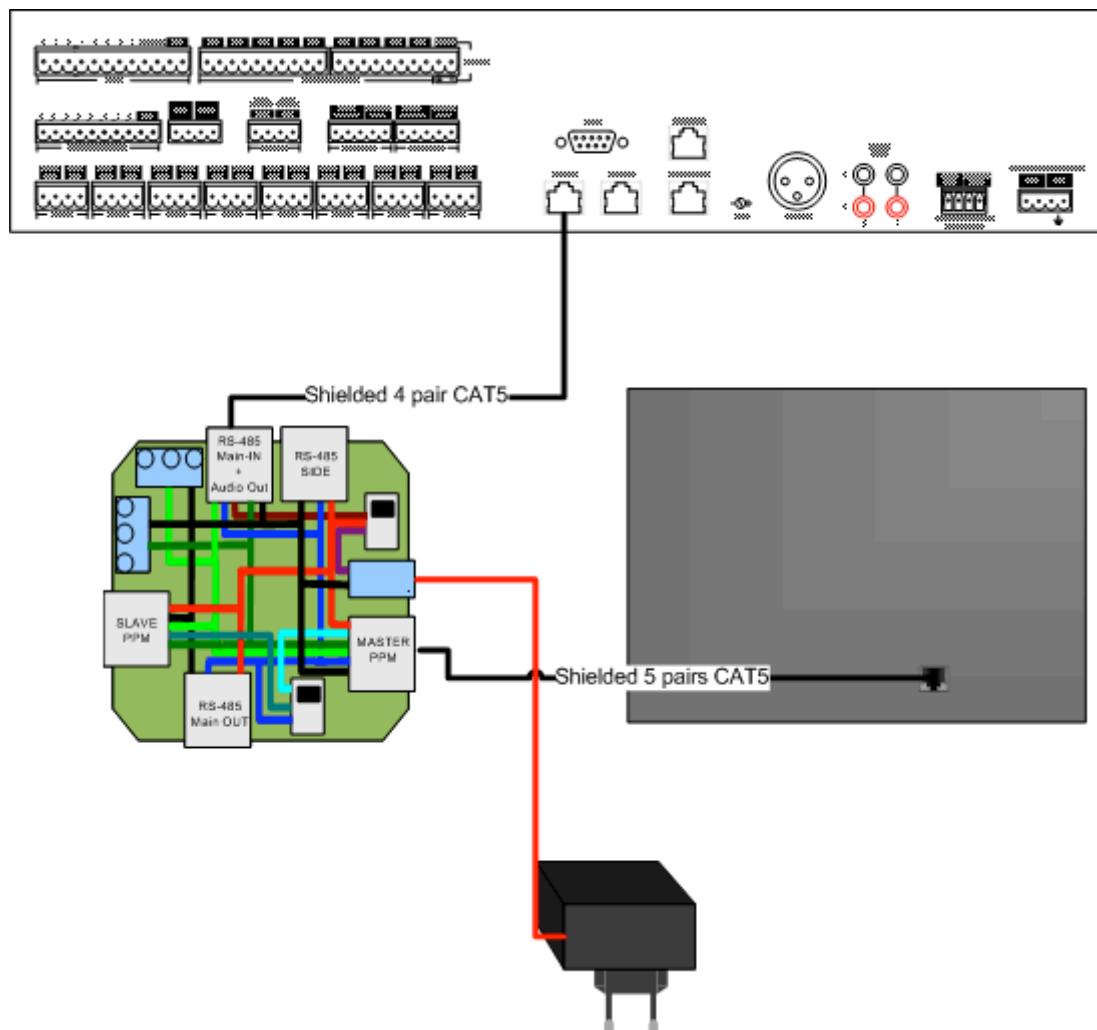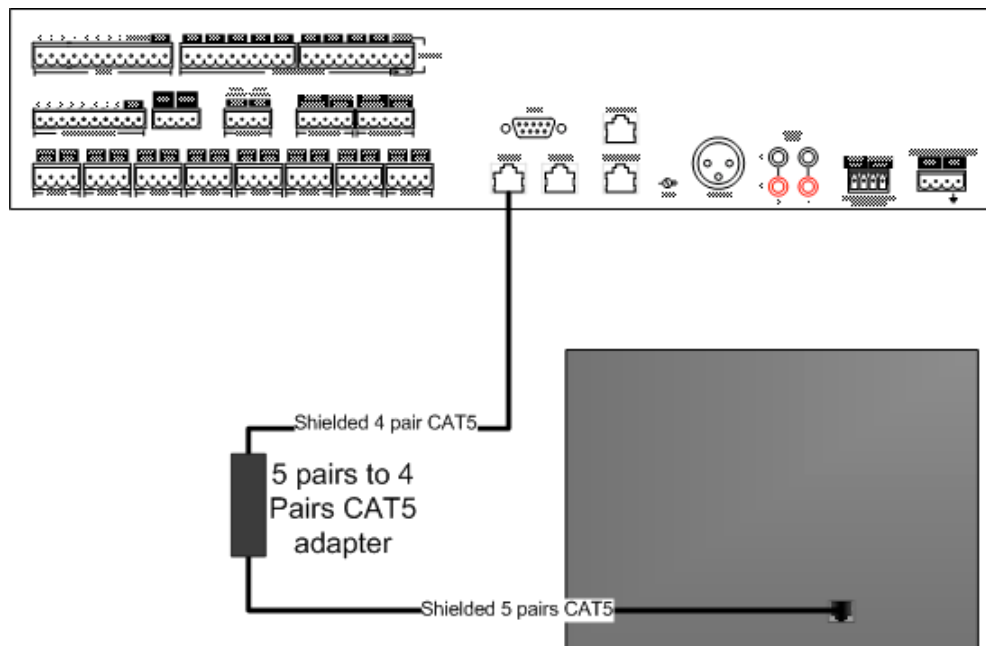


7.3. CD-16,CD-8 on IDA8

Up to 4 CD-16,CD-8 can be connected to an IDA8C or IDA8S.

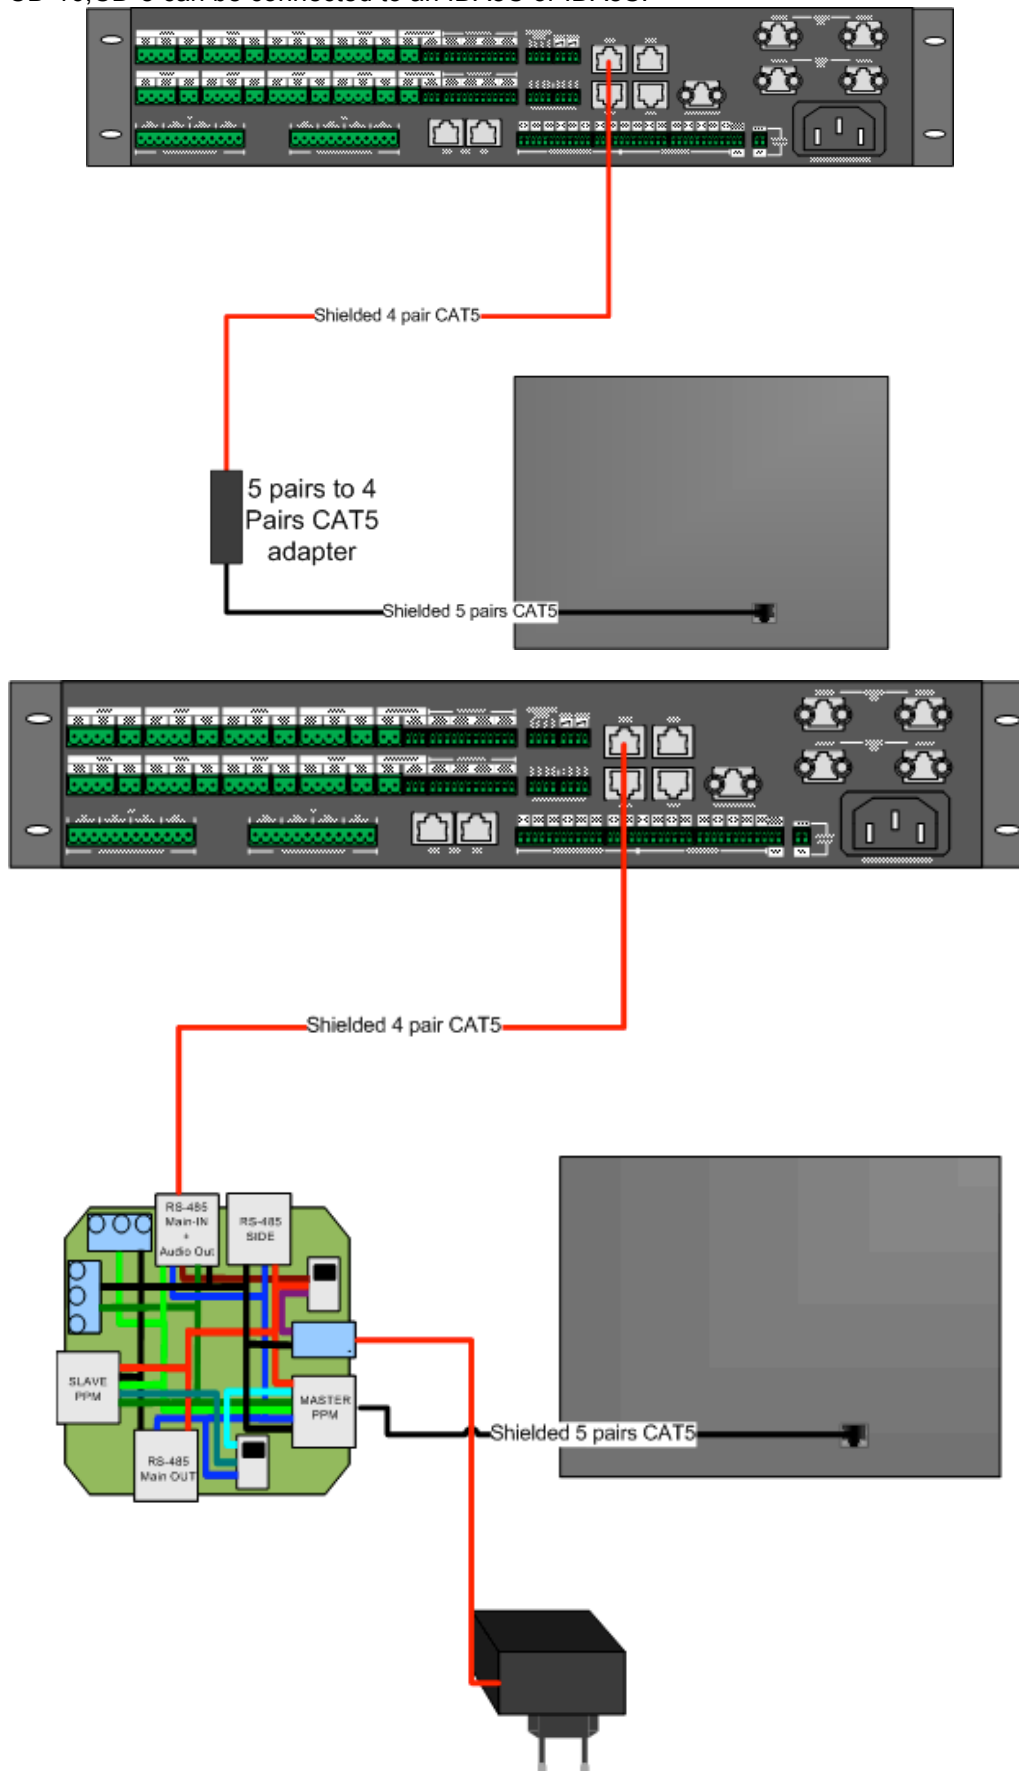

7.4. CD-16,CD-8 on IDA4

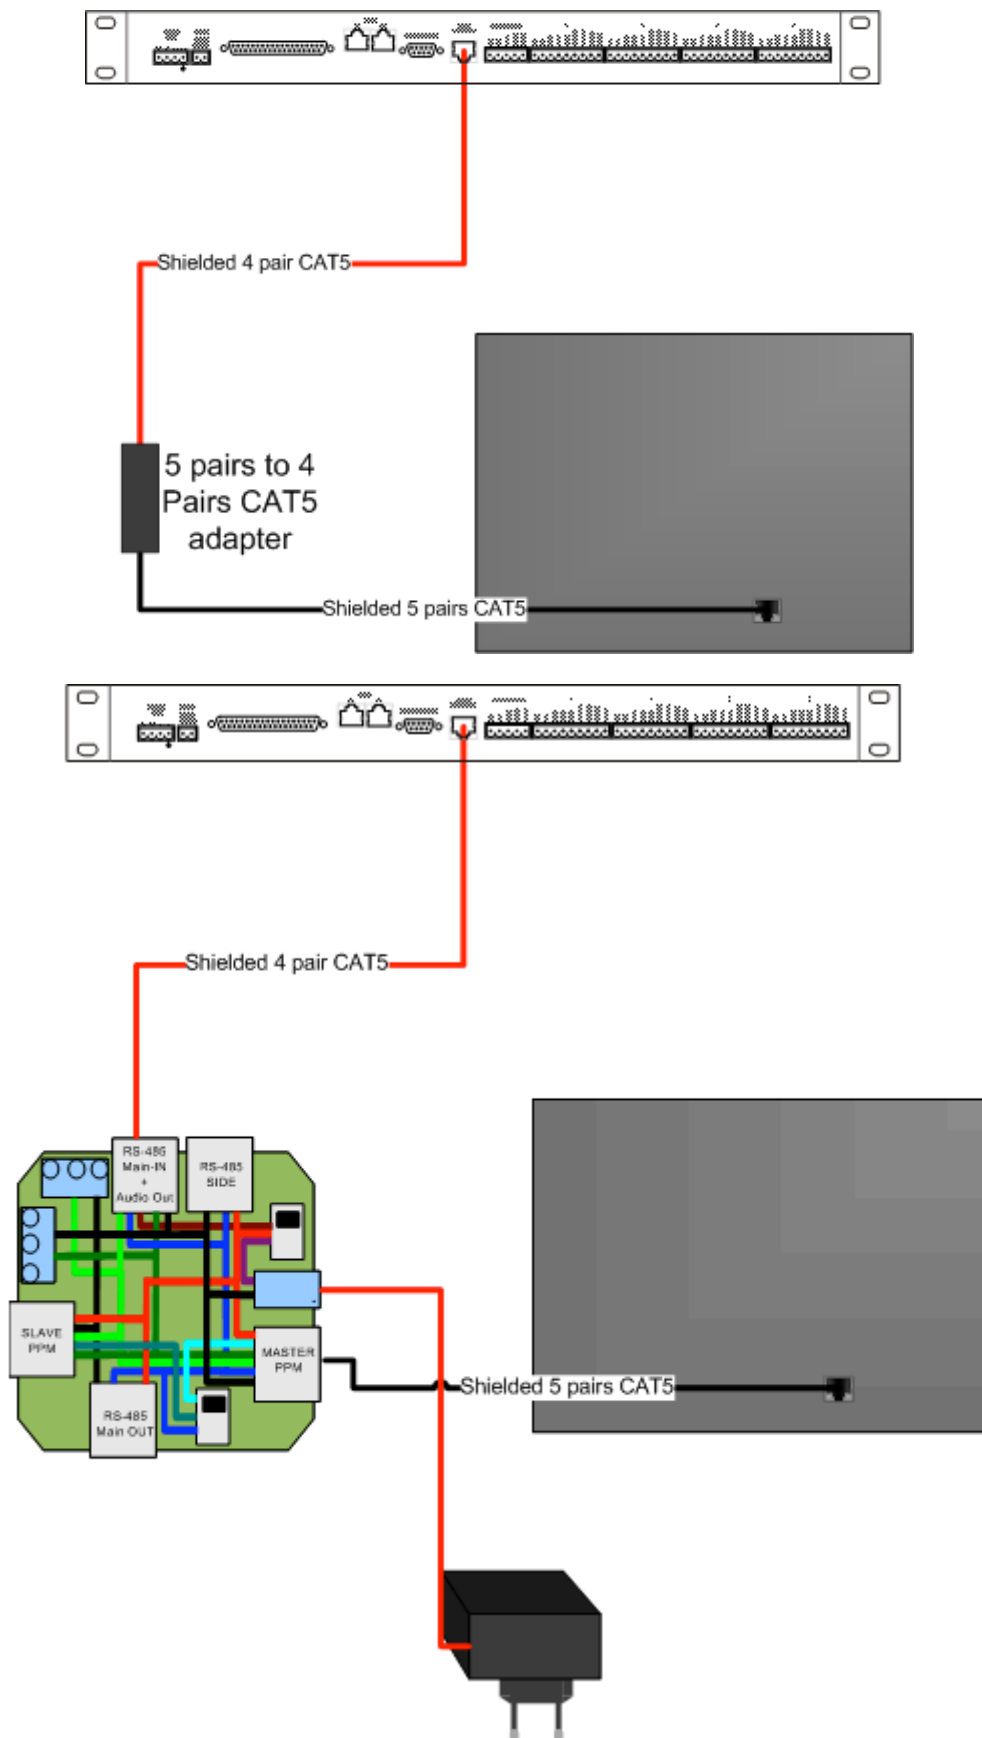

8. CD-16,CD-8 troubleshooting guide

The CD-16,CD-8 microphone is constantly monitored through the VACIE system. Fault indication and messages could vary depending on the VACIE system. For more information about CD-16,CD-8 fault, please read IDA4, IDA8 and DIVA8 user manuals.

8.1. CD-16,CD-8 can't boot

- Make sure the CAT5 cable is correctly connected.
- Make sure the CD-16,CD-8 power LED is lit.
- If no power or if the PSS still doesn't boot, please contact your ATEIS dealer.

8.2. Noise in the speaker

If digital noise can be heard in the CD-16,CD-8 monitoring speaker:

- Verify that the CAT5 cable is from the correct type.
- Verify the CAT5 cable condition.
- If nothing helps, please contact your ATEIS dealer.

8.3. CD-16,CD-8 is powered ON but the buttons don't work.

- Verify that the CD-16,CD-8 microphone console is activated in the VACIE software configuration.
- If nothing helps, please contact your ATEIS dealer.

8.4. CD-16,CD-8 is connected to VACIE but there is a connection fault state

- Verify that the CD-16,CD-8 microphone console is activated in the VACIE software configuration.
- Verify the CAT5 cable condition.
- Make sure the CAT5 cable is correctly connected.
- If nothing helps, please contact your ATEIS dealer.

9. Safety Declaration



Warning

This sign indicates a potentially hazardous situation that can result in death or serious personal injury.

- Do not expose the PSSG2 to extreme temperatures, direct sunlight, humidity, or dust, which could cause fire or electrical shock hazard.
- Keep away water or other liquids from the PSSG2. Otherwise fire or electrical shock may result.
- In case of using external power supply, connect the PSSG2 only to an 24 VDC outlet of the type stated in this Owner's Manual. Otherwise fire and electrical shock hazard results.
- When disconnecting the power cord from an AC outlet always grab the plug. Never pull the cord. A damaged power cord is a potential risk of fire and electrical shock hazard.
- Avoid touching power plugs with wet hands. Doing so is a potential electrical shock hazard.
- Take care for correct polarity when operating the PSSG2 from a DC power source. Reversed polarity may cause damage to the unit or the batteries.
- Avoid placing heavy objects on power cords. A damaged power cord is a fire and electrical shock hazard.
- Do not cut, scratch, bend, twist, pull, or heat the power cord. A damaged power cord is a fire and electrical shock hazard. Ask your ATEİS dealer for replacement.
- Turn off immediately the unit, remove the power cord from the AC outlet and consult your ATEİS dealer in any of the following circumstances:
 - Smoke, odor, or noise getting out of the unit.
 - Foreign objects or liquids get inside the PSSG2.
 - The unit has been dropped or the shell is damaged.
 - The power cord is damaged.If you continue using the PSSG2, fire and electrical shock may result.
- Do not drop or insert metallic objects or flammable materials into the unit as this may result in fire and electrical shock.
- Do not remove the PSSG2's cover, as there are exposed parts inside carrying high voltages that may cause an electrical shock. Contact your ATEİS dealer if internal inspection, maintenance, or repair is necessary.
- Do not try to make any modifications to the PSSG2. This is a potential fire and electrical shock hazard.



Caution

This sign indicates a potentially hazardous situation that can result in moderate or minor personal injury and/or property damage.

- To prevent the unit from falling down and causing personal injury and/or property damage, avoid installing or mounting the unit in unstable locations.
- Operate the PSSG2 in an environment with a free-air temperature of between 0 °C and 40 °C (32 °F and 104 °F).
- Do not use benzene, thinner, or chemicals to clean the PSSG2. Use only a soft, dry cloth.
- If the PSSG2 is moved from a cold place (e.g., overnight in a car) to a warmer environment, condensation may form inside the unit, which may affect performance. Allow the PSSG2 to acclimatize for about one hour before use.

10. International sales and service points

Who are we?

With over 10 branch offices and more than 40 representatives around the globe, ATEIS may call itself a multinational in development and manufacturing of electronic solutions for the Voice-Alarm, Commercial Audio, Communication and Conferencing markets. With 30 years of experience in development and manufacturing, ATEIS holds factories in Europe and Asia where we lead a team of more than 40 dedicated highly qualified engineers who are working solely on state of the art technology.

For us, the test is to be seen as the best in our business by all; our customers, employees and suppliers. That's why we are constantly on the outlook for ways to strengthen our organisation, expand our portfolio and our geographical presence.

All to provide better service and support!

ATEIS

ATEIS Europe B.V.

Sydneystraat 42 - 3047 BP - ROTTERDAM - NETHERLANDS
Phone: +31 (0)10 2068000 - Fax: +31 (0)10 2068000
www.ateis-europe.com
info@ateis-europe.com


Penton/ATEIS USA.

21 Sabin St. Pawtucket, RI 02860 - USA
Phone: 401-727-1600 - Fax: 401-727-0003
www.ateis.us
info@ateis.us


ATEIS France SAS.

32, av de l'europe - ZA de Font Ratal - 38040 Claix - FRANCE
Phone: +33 (0)4 76 99 26 30 - Fax: +33 (0)4 76 99 26 31
Sales: +33 (0)4 76 99 26 37 - contact@ateis-france.fr
www.ateis-france.fr


ATEIS Middle FZCO.

LIU 11 Dubai - Silcone Oasis - DUBAI UNITED ARAB EMIRATES
Phone: +971 4 3262730 - Fax: +971 4 3262731
www.ateis.ae
info@ateis.ae


ATEIS Germany GmbH.

Kirchenstrasse 11 - 82194 Gröbenzell - DEUTSCHLAND
Phone: +49 (0) 8142 305070-30 - Fax: +49 (0) 8142 305070-39
www.ateis-germany.de
info@ateis-germany.de


ATEIS FAR EAST CORP

2F, No.60, Xing Hua 2nd Rd., Taizi, Taichung county, 427 - TAIWAN, R.O.C.
Phone: +886 4 25333820 - Fax: +886 4 25333830
www.ateis.com
sales@ateis.com.tw


ATEIS UK Ltd

Unit 10 Hacche Lane - Pothfields Industrial Estate
South Molton - EX36 3DW - UK
Phone: 0845 652 1511 - Fax: 0845 652 2527
www.ateis.co.uk
info@ateis.co.uk


ATEIS SE PTE LTD

Blk 209 New Upper - Rd #04-631 - SINGAPORE 460209
Phone: +65 6456 4448 - Fax: +65 6451 3426
www.ateis-europe.com
ashley@ateis-se.com.sg


ATEIS Suisse SA

Chemin du Dévent, 1024 Ecublens - SWITZERLAND
Phone: +41 (0)21 861 25 10 - Fax: +41 (0)21 861 25 09
www.ateis.ch
adrian.gloor@ateis.ch


ATEIS CHINA

Room 610, No. 255 Wubao Road, Minxing district
Shanghai - CHINA
Phone: 021-54465191/92 - Fax: 021-54465193
www.ateis.com.cn
sales@ateis.com.cn

DELIVERING YOUR MESSAGE